


2004-2006 MODELS

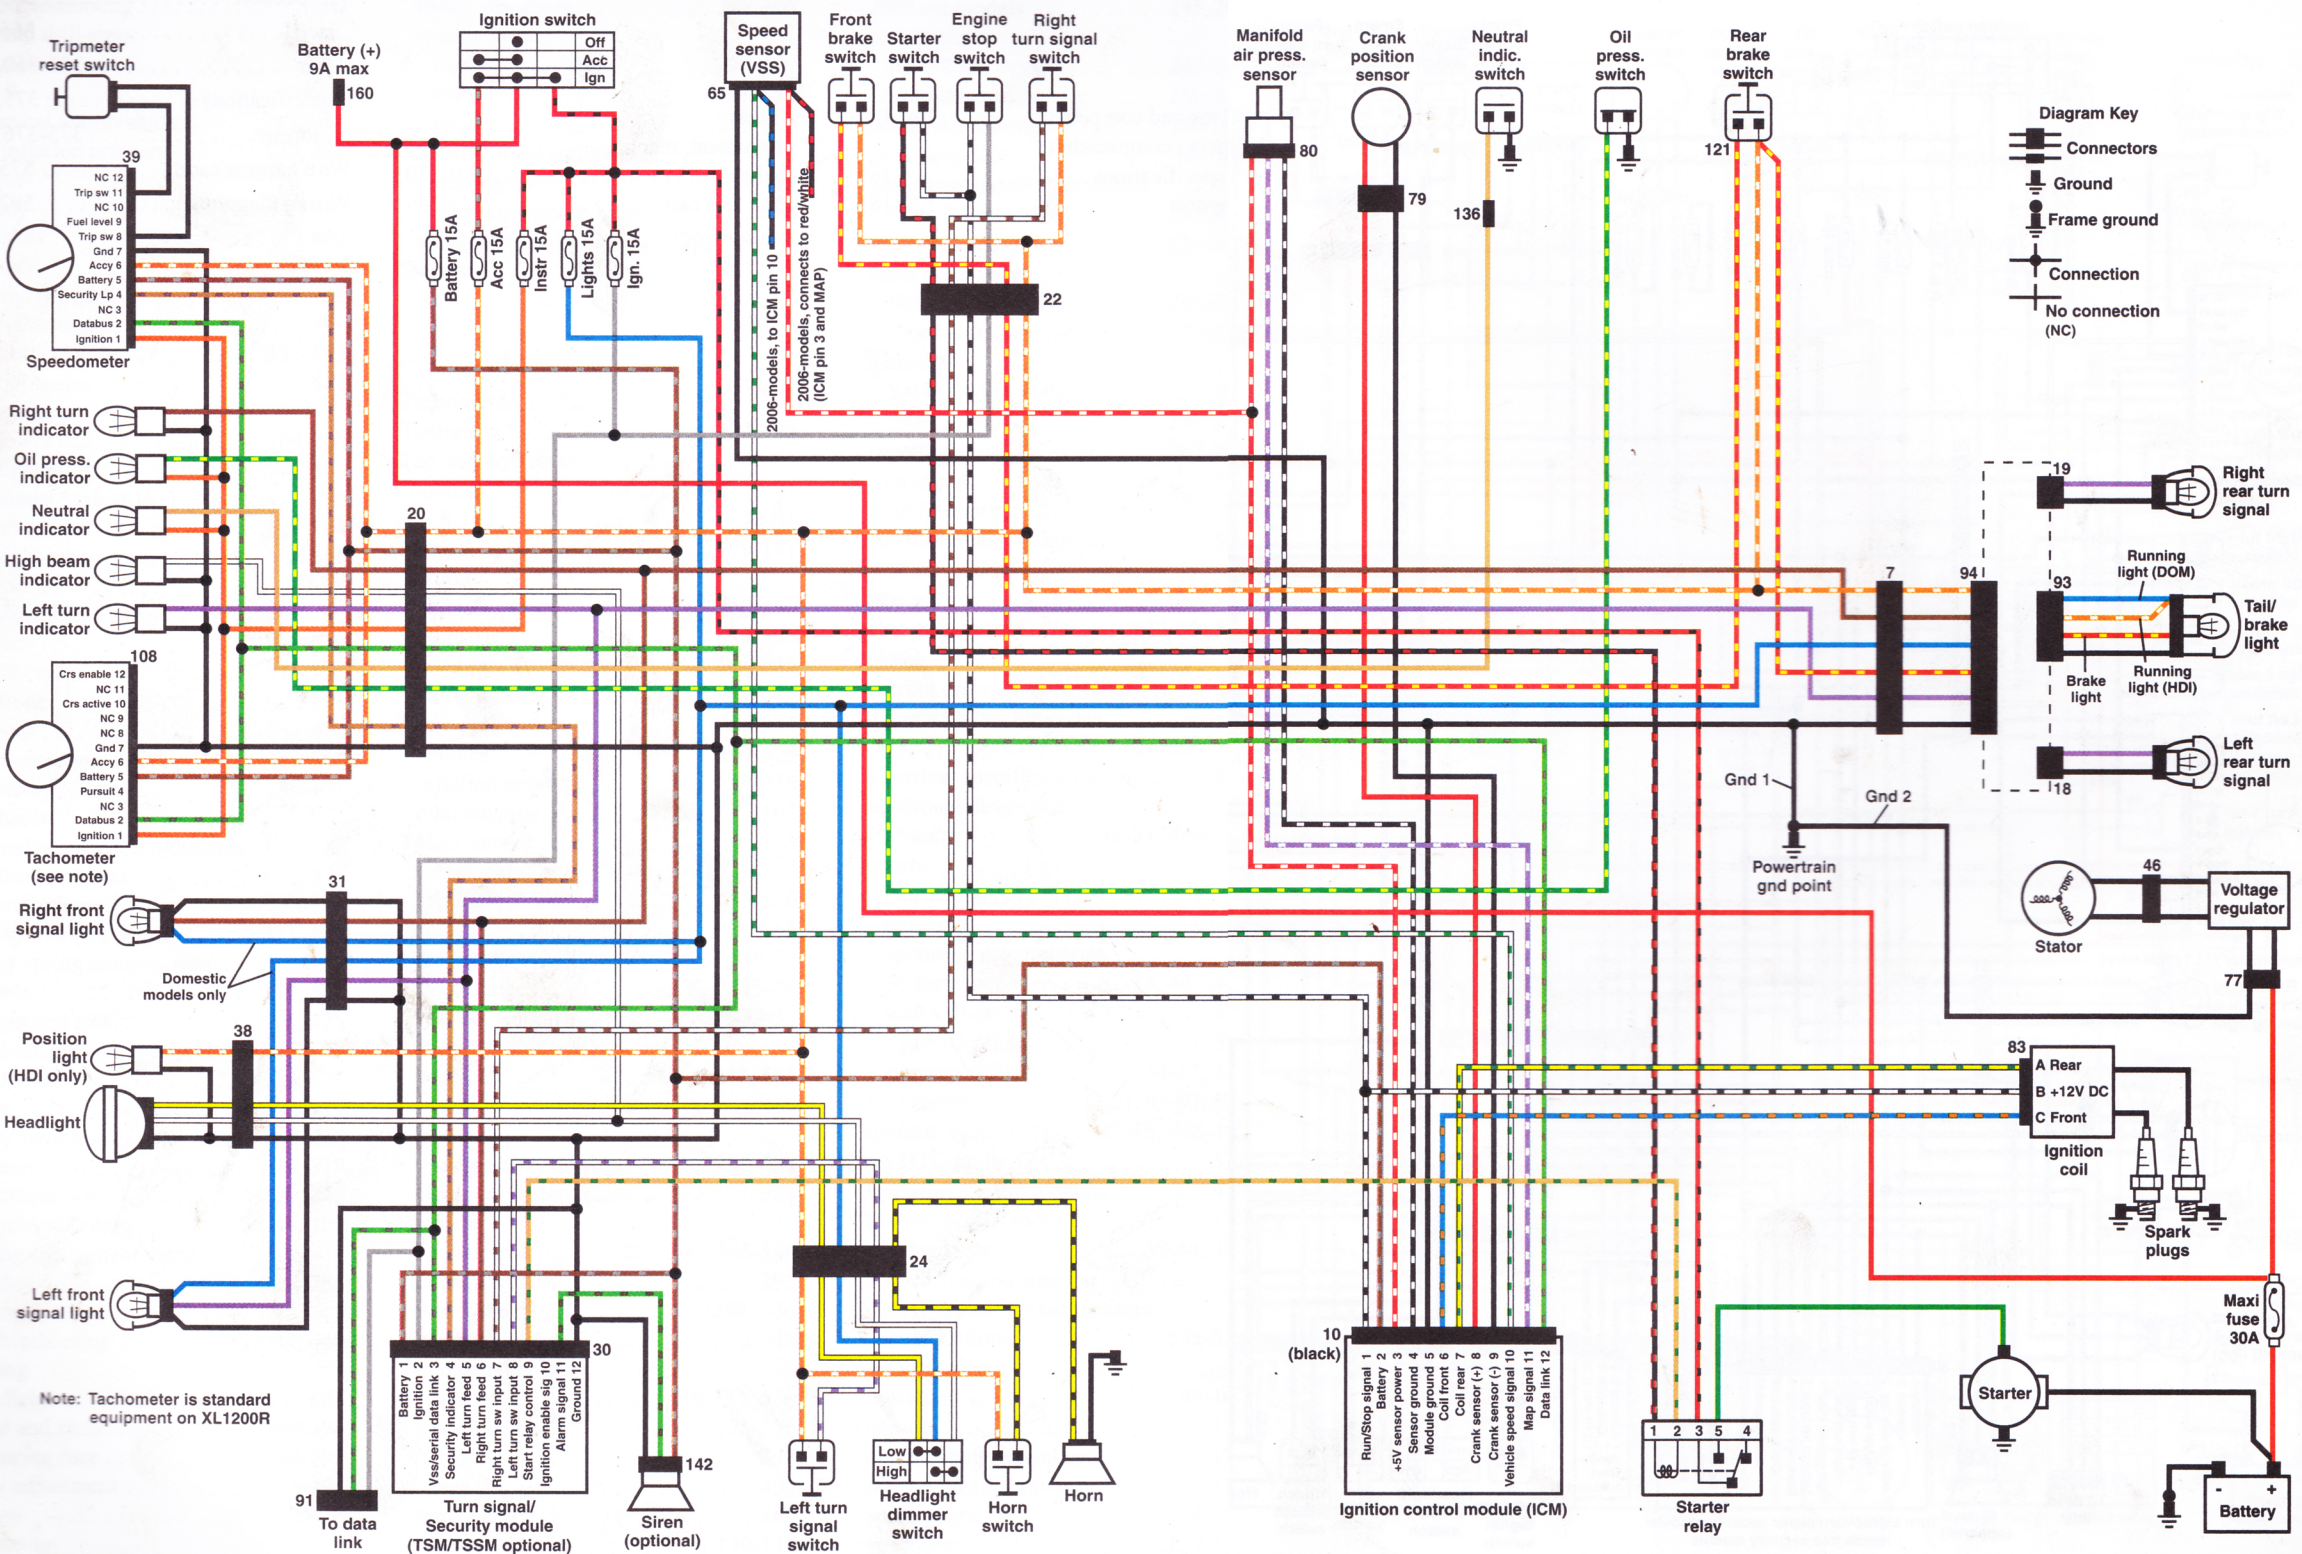

Note: Tachometer is standard equipment on XL1200R

Turn signal/ Security module (TSM/TSSM optional)

1	Battery
2	Ignition
3	Vss/serial data link
4	Security indicator
5	Left turn feed
6	Right turn feed
7	Right turn sw input
8	Left turn sw input
9	Start relay control
10	Ignition enable sig
11	Alarm signal
12	Ground

Ignition control module (ICM)

10 (black)	Run/Stop signal
1	Battery
2	+5V sensor power
3	Sensor ground
4	Module ground
5	Coil front
6	Coil rear
7	Coil rear
8	Crank sensor (+)
9	Crank sensor (-)
10	Vehicle speed signal
11	Map signal
12	Data link

Lighting Connections:

- 19: Right rear turn signal
- 93: Tail/brake light (includes Running light (DOM), Brake light, Running light (HDI))
- 118: Left rear turn signal

Stator and Voltage Regulator:

- 46: Voltage regulator
- 77: Stator

Ignition Coil:

- 83: Ignition coil (A Rear, B +12V DC, C Front)

Starter relay:

1	Starter
2	Ground
3	Ignition
4	Starter

Battery:

Maxi fuse 30A